



Here I have selected both server to create protected volumes.

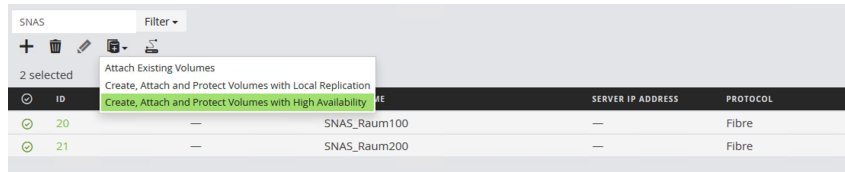

ID	NAME	SERVER IP ADDRESS	PROTOCOL
20	SNAS_Raum100	—	Fibre
21	SNAS_Raum200	—	Fibre

Then both server are located on the left side of the screen, I have no chance to select non-preferred path individual by server.

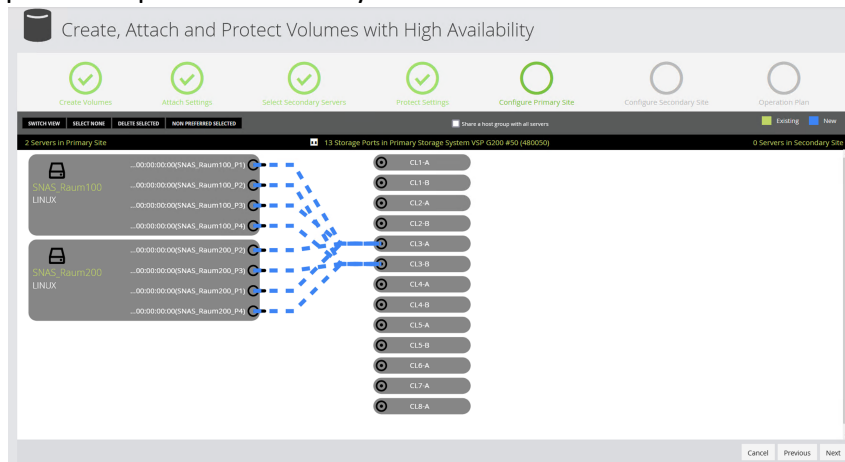

Here I have joined the server „SNAS_Raum200“ later as secondary server.

Select Secondary Servers (Optional)

☐ Select All

SERVER ID	SERVER LABEL	SERVER IP ADDRESS	PROTOCOL	OS TYPE	VOLUME COUNT	REPLICATION TYPE
20	SNAS_Raum100	-	Fibre	LINUX	0	-
21	SNAS_Raum200	-	Fibre	LINUX	0	-

Now the second server is located on the right screen. Now I can select non-preferred path individual by server.

